

IMPORTANT SAFETY INSTRUCTIONS

- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- To reduce the risk of electrical shock, do not expose battery or internal flashlight components to water or other liquids.
- Use only recommended batteries.
- Remove batteries from flashlight before performing any routine maintenance or cleaning.
- Do not disassemble the flashlight. The LED cannot be replaced.
- Do not operate flashlight near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite fumes.
- Do not permit children to use flashlight unsupervised.
- Do not expose battery or internal flashlight components to rain.
- Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets in your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.
- Do not crush, drop or damage batteries. Do not use batteries that have been dropped or received a sharp blow. A damaged battery is subject to explosion. Use a damaged battery can result in serious personal injury.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this product.

OPERATION

This light has 3 main levels (High, Medium, and Low). Each main level can be configured to one of its two sub-levels. The second sub-level of the High can be further configured to different brightness levels or strobes.

- Basic Operation
 - Short click turns on the light to High or turns off the light.
 - Long click (press and hold for about 0.6 seconds) turns on the light to Low.
- Advanced Operation and Configuration
 - Short click turns on the light to High. Short click again quickly to cycle from High to Medium, and Low.
 - Press and hold to cycle through Low, Medium and High, release to set. When press and hold, the light always cycle from Low to High regardless which level you are currently in.
 - Double click to toggle and select between the two sub-levels for that main level. Sub-level selections (except the strobe) for the 3 main levels are memorized after the light is turned off and through battery changes.
 - The second sub-level of the High can be configured after 6 double clicks. Double click (starting with the 7th) to cycle and select different brightness levels or strobes. The selections for the second sub-level of the High are memorized after the light is turned off and through battery changes.

Refer to www.zebralight.com for further information about the operation of this product.

WARRANTY

ZebraLight, Inc. warrants its products to be free from defects in materials and workmanship. We will repair or replace, at our option, without charge, any products or parts which is found to be defective under normal use and service within 12 months from the date of purchase with proof of purchase. Such repair or replacement shall be the purchaser's sole and exclusive remedy under this warranty. This warranty does not cover normal maintenance and service and does not apply to any products or parts which have been subject to modification, misuse, abuse, negligence, accident, or improper maintenance or repair by anyone other than ZebraLight.

Our guarantee is unconditional. If any purchase fails to meet your complete satisfaction, for any reason, you may return it or exchange it within 30 days of receipt of your shipment. Before returning any product, you MUST obtain a Return Merchandise Authorization number (RMA) from a customer service representative. Include the original invoice received with the merchandise and send the package prepaid, via UPS or insured USPS Mail to:

ZebraLight, Inc.
Attention: Warranty/Repair Department
8320 Sterling Street
Irving, TX 75063
U.S.A.

ZebraLight flashlight and headlamp products are designed and engineered in the U.S. and manufactured in China. The distinctive shapes and styles of all ZebraLight products are trademarks of ZebraLight, Inc. U.S. and international patents are pending.